

Instructions

califone PA system



- 1 # 22 Turn Power Switch ON.
- 2 #16 On the Master Volume Control, hold the UP ARROW for 10 seconds
Note: every time the main power is turned off, this step will need to be repeated.
- 3 #5 Turn up microphone volume line 1 and 2.
- 4 #6 Put switch on SPEECH.
- 5 #2A Adjust volume control for separate microphones.
#2B Adjust volume control for separate microphones.
- 6 Set 2A on any number.
- 7 On microphone match number of the 2A setting.
Note: If you are using 2 microphones, set microphone 2B on a number different from 2A setting. Set second microphone to match 2B setting.

Lapel Microphone Instructions:

These microphones are VERY SENSITIVE, so turn down either volume 2A or 2B, if microphone still squeals turn down Line 1 or 2 depending on which side you are using, then adjust volume wheel of the belt pack. All microphones have an off position, standby position and an on position.

Turn off all microphones when not in use for extended periods of time to save battery power.

To use CD/Tape Player

- 1 #22 Turn power ON.
- 2 #10 Turn ON CD/Tape on/off volume switch.
- 3 Insert Tape or CD in the proper player.
- 4 #14 Adjust Bass/Treble controls.
#15 Adjust Bass/Treble controls.
- 5 #10 Adjust volume.
- 6 **To talk when the CD/Tape player is in operation turn microphone on and follow instructions above.**

To talk over music turn on switch #23, voice priority.

Continues next page >

Cleveland 216.901.0000
Columbus 614.431.3000
Toll Free 866.901.6001
After hours Call any of the numbers above and press Option 2; leave a message and we will respond shortly.
www.EVENTSOURCE.net

Instructions continued

califone PA system



To use Extension Speaker with Main System

- Follow steps on Page 1 for microphone set up.
- On main PA System, turn ON the UHF transmitter - #17.
- Set number next to UHF switch to any number other than the 2A or 2B settings on the microphones.

Extension Speaker Instructions

- 1 Set up speaker on tripod and plug in AC cord.
- 2 Turn ON power switch on top of extension speaker; match number to UHF setting.
- 3 Adjust volume by pressing up or down arrows.
- 4 Adjust Bass/Treble knobs.