

**Includes:**  
 Machine/cart  
 Floss bowl  
 Clear bubble guard  
 Whirl grip with 4 clips

**Options:**  
 Floss sugar carton 1/2 gallon  
 Cotton candy cones  
 Cotton candy bags

Cleveland 216.901.0000  
 Columbus 614.431.3000  
 Toll Free 866.901.6001  
**After hours** Call any of the numbers above and press Option 2; leave a message and we will respond shortly.  
[www.EVENTSOURCE.net](http://www.EVENTSOURCE.net)

# Instructions

## cotton candy machine



- 1 Make sure motor is positioned in the center of the cart and switches are facing the opening.
- 2 Plug the machine into a standard electrical outlet.
- 3 Fill center of machine with approximately one cup or less of sugar.
- 4 Moisten Whirl Grip (mesh screen) with a damp sponge. This process allows the floss to adhere to the side of the floss bowl.
- 5 Turn the motor switch ON and turn the heat switch to MEDIUM.
- 6 Dampen cone slightly and twirl cone approximately 1 inch away from Whirl Grip. Do not stop twirling until machine is turned off.

**WARNING:** Do not put hand close to the center of the machine while operating.

- 7 Work floss away from the center of machine. You may make several servings, approximately up to 10 at a time, but will have to stop to allow the machine to cool to prevent the sugar from burning.
- 8 **Once you have made the servings, you MUST TURN OFF THE HEAT SWITCH FIRST. This step is crucial to prevent sugar from clogging and burning.**
- 9 Allow machine to cool for a few minutes.
- 10 When you are ready to make more servings, repeat Steps 5-9.
- 11 When finished, TURN OFF HEAT SWITCH FIRST.
- 12 When cool, turn OFF the motor switch.

### Cleaning

**Please do not attempt to clean this machine as problems may occur.**

### cotton candy supplies

| SERVINGS:    |            | 500 | 1000 | 2000 |
|--------------|------------|-----|------|------|
| Floss Mix    | 1/2 gallon | 10  | 20   | 40   |
| Floss Cones  | 100 pack   | 5   | 10   | 20   |
| Plastic Bags | 100 pack   | 5   | 10   | 20   |