

Includes:
Insert pan

Cleveland 216.901.0000
Columbus 614.431.3000
Toll Free 866.901.6001
After hours Call any of the numbers above and press Option 2; leave a message and we will respond shortly.
www.EVENTSOURCE.net

Instructions

electric roaster oven



- Turn the heat control dial to the OFF position, then plug cord into appliance.
- Plug electrical cord into a 110-120 volt wall outlet.
- Remove lid.
- The porcelain enameled insert pan **MUST BE LEFT IN THE ROASTER** during the entire cooking process. The insert pan collects moisture and grease and prevents it from running down the outside of the roaster.
- If a recipe calls for a preheated oven, replace lid and turn pointer on heat control dial to temperature setting. The signal light will glow until the roaster oven reaches the proper temperature, at which point the light will go out, signaling that the oven is now ready for food to be placed inside.

The same temperature settings recommended for your range oven recipes can be used on this dial. Because the roaster oven uses much lower wattage, it will take longer to preheat than a range oven, but food cooks at the same speed after the temperature has been reached. The first preheat may produce a temporary, harmless odor.

- If recipe does not call for a preheated oven, place food to be cooked in oven-proof glass, replace lid, and set heat control to cooking temperature.
- When necessary to remove lid to check the cooking progress, to baste or to take food out of the roaster, use the lid holder at either end of the roaster to support the lid.
- When cooking is finished, turn temperature control to the OFF position before disconnecting the cord.