

Includes:
8 sheet pans

Cleveland 216.901.0000
Columbus 614.431.3000
Toll Free 866.901.6001
After hours Call any of the numbers above and press Option 2; leave a message and we will respond shortly.
www.EVENTSOURCE.net

Instructions

hot box



WARNING Be certain to plug the hot box directly into a wall outlet without using an extension cord and without other items plugged into the same outlet. Failure to do this will cause the hot box to function below expectation and can be dangerous.

- Turn the power switch ON; the red power light will illuminate.
- Preheat at this temperature for 30 minutes.
- Place food on sheet pans and place in Hot Box.
- Adjust the thermostat to your desired temperature.
A general guideline is:
3 is approximately 125°F
5 is approximately 150°F
7 is approximately 175°F
- Proper food holding temperature is 140° or higher for most food.
- To shut down, turn the power switch OFF.

Note: *To keep food from drying out, add a pan of water to the bottom of the unit.*

Cleaning

- Throw all debris away.
- Place all sheet pans back in the Hot Box.