

**Includes:** Main unit  
Cone tray  
Scoop

**Options:** Flavored syrups in Lime,  
Blue-Raspberry, Cherry  
Pumps  
Cups

Cleveland 216.901.0000  
Columbus 614.431.3000  
Toll Free 866.901.6001  
After hours Call any of the numbers above and press Option 2; leave a message and we will respond shortly.  
www.EVENTSOURCE.net

# Instructions

## sno-kone machine



**WARNING:** Machine must be properly grounded to prevent shock in case of electrical problems. The motor is 110 volt, single phase, 60 cycle, AC current.

- Start the motor and fill the gooseneck with ice cubes or block ice broken into 3" - 4" pieces. The larger the piece of ice, the better the snow. Fill to about an inch from the top.
- Push the pusher handle down to press the ice against the cutterhead. A firm, even pressure is all that is required, but sometimes you will find it better to relieve the pressure two or three times on the way down. This rearranges the ice and permits a better bite against the cutter.
- DO NOT FORCE THE HANDLE or the motor can stall.
- When too much pressure is necessary, relieve the handle, and come down again. Too much pressure on the pusher handle will make the ice come out coarse; too little pressure makes the ice mushy.

**Important note:** During normal operations, the surface temperature will reach 150° F.

### sno-kone supplies

SERVINGS:		250	500	1000	2000
Flavored syrup	1 gallon	2	5	10	20
Cones	200 pack	1	3	5	10