





FLOORLOK LAYING INSTRUCTIONS

ROW #1

Start at the top left-hand corner position by placing a full panel with the 3 "end" lugs pointing to the right, and the side without any "end" lugs to the left.

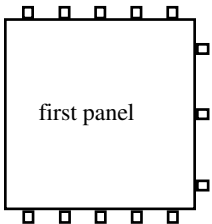


Then fit a second panel with the 3 end lugs pointing to the right

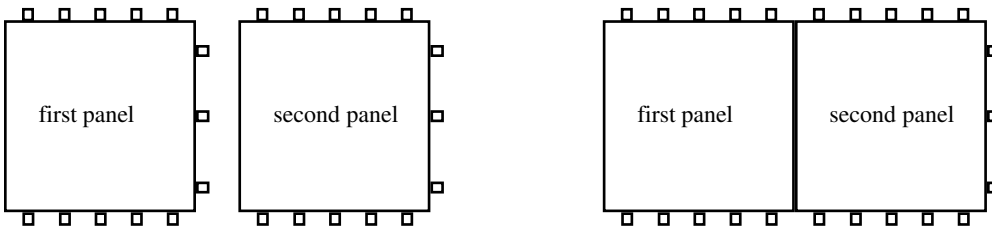

Continue to lay the row with as many full panels as required for the size of the floor, all with the "end" lugs pointing right, top, & bottom. Make sure that the panels are flush along the whole length of the row to ensure the edging will be straight.

TO FIT THE PANELS


Hold the panel at an angle as shown and push it so that the lugs slide underneath the panels already laid. When the lugs are fully under, and the 2 panels are fully touching along their edges, then lower the panel to the floor. If the panels are not square, or if the edges are not touching all along the panel being fitted will not lower. DO NOT force the panel down, SIMPLY ADJUST it until it lowers.

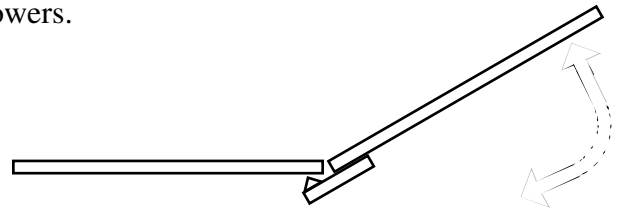

It may be helpful to have someone hold the panels of the first row while fitting the second row, to stop them slipping on a smooth surface, or alternatively, lay the first row and then fit the edging to hold the panels while the second row is added.

ROW #2

Begin row #2 at the left hand side with a half panel, again with the 3 "end" lugs pointing to the right as it is the first panel in the row. Then fit full panels with the 3 "end" lugs all pointing right, and complete the row with another half panel.

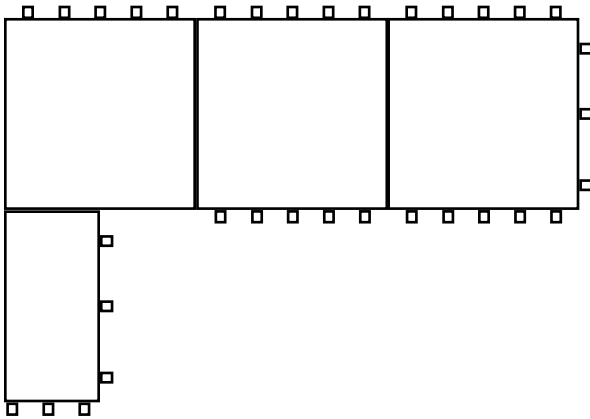

Completed row of three panels = 9 foot floor

EDGING

Start to lay the edging when row two is completed. The edging then acts as a "straight edge" and ensures each row is square and flush as it is laid. Fit the edging by pushing the lugs underneath the panels at an angle, and then lower to the floor, in the same manner as when laying the panels, do not force them down. Half length and full length edges are supplied so that the panel joints and the edging joints never coincide. They follow the same overlapping brickwork pattern. The corners are always positioned on the sides of the floor as shown below and never on the top.

ROW #3

Lay with full panels as row one.


ROW#4

Start and finish with half panels as with row two. Continue alternating rows and fitting edges as above until the floor is laid.

PLEASE NOTE

1. Never move the trolley without the removable top bar fitted.
2. The flooring, being made from natural wood, should be stored in a well ventilated area, and never in a hot, dry place.
3. Avoid excessive exposure to moisture.

Two corner pieces always on the same edge and always positioned on the ends of the row.

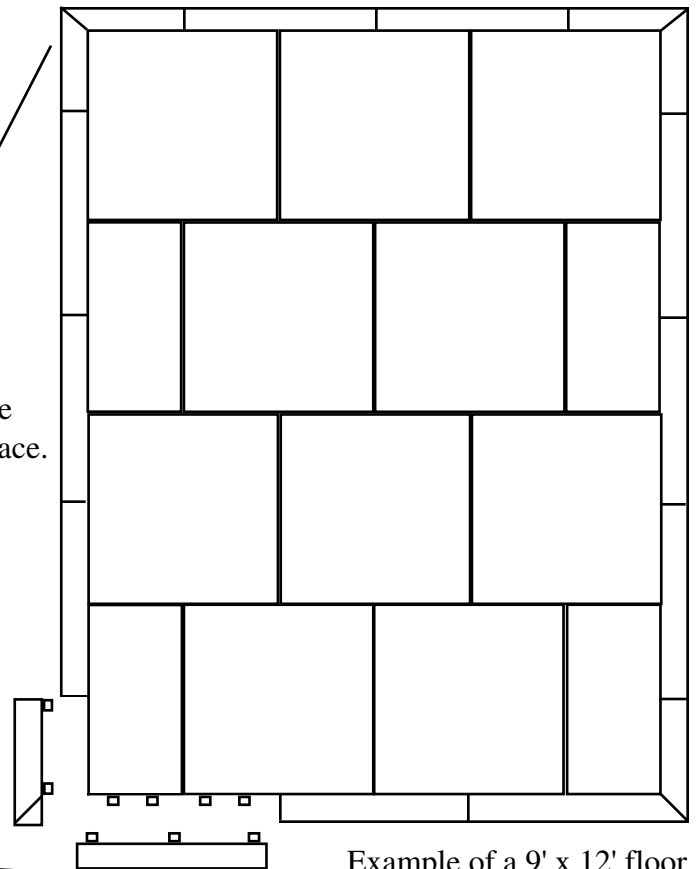

Example of a 9' x 12' floor